


Assembly Manual


The maximum load for this PEX-Uncoiler is 40KGS.

1

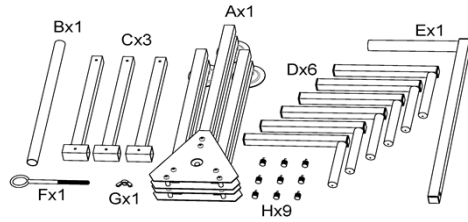


All components (Item # and Quantity)

2

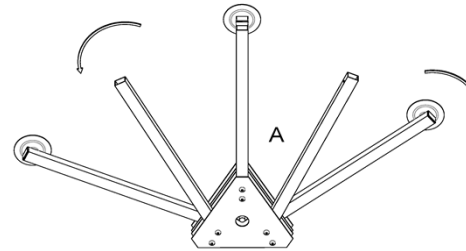


Base (A) - Spread brackets outward

3

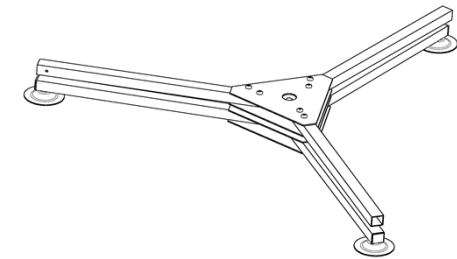


Base (A) - Continue until fixed positions

4

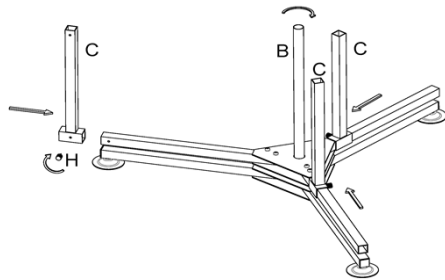


Bracket (B) - Screw into the center of base (A)
Bracket (C) - Slide to center of base (A) and then loosely assemble with set screw (H)

5

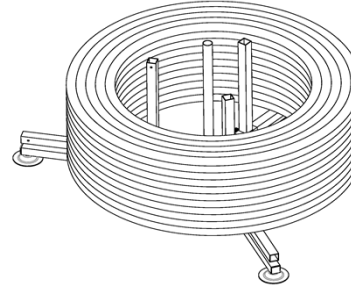


Place tubing around bracket assembly

6

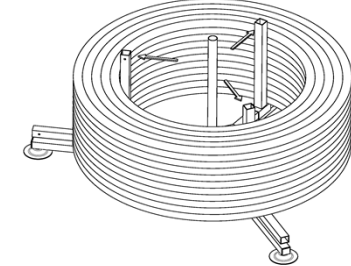


Bracket (C) - Adjust outward until coil is snug and then tighten set screws (H)

7

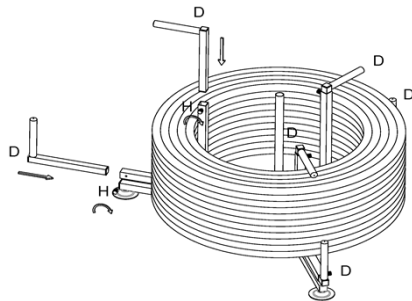


Bracket (D) - Assemble into position on ends of Brackets (A) & (C) and then tighten set screws (H)

8

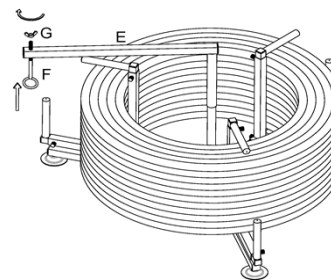

Bracket (E) - Assemble into position on top of Bracket (B)
Eyelet (F) & Wing nut (G) - Assemble on the end of bracket (E) as shown

9

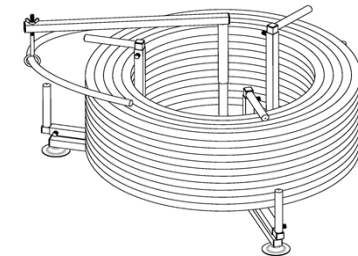

Feed tubing through the eyelet (F)
PEX Uncoiler is ready for use